


21. Keyless Entry Control Module

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the glove box. <Ref. to EI-39, REMOVAL, Glove Box.>
- 3) Remove the nut, then disconnect the connector to remove the keyless entry control module.

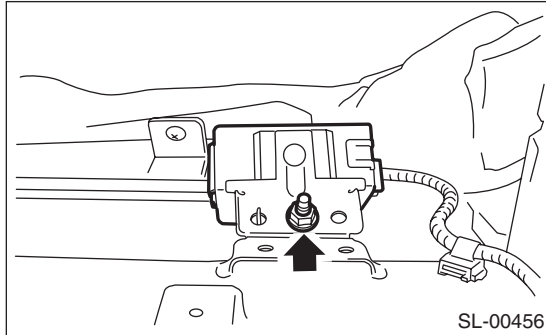

B: INSTALLATION

Install in the reverse order of removal.